

Interface Setup

COMSTAR Interface Series


Start Up:

- Start with all COMSTAR equipment "OFF".
- Connect interface unit to the back of wired system or wall port via **RED** 3-Pin XLR.
- Connect interface unit to the COMSTAR base station via **GREEN** 4-Pin XLR.
- Turn "ON" COMSTAR base station, then install batteries into wireless headsets & COMPAK radios.



Adjusting Volume:

- Volume is increased and decreased by the red and white buttons on the interface.
- Volume is adjusted in digital "steps", click and release button.

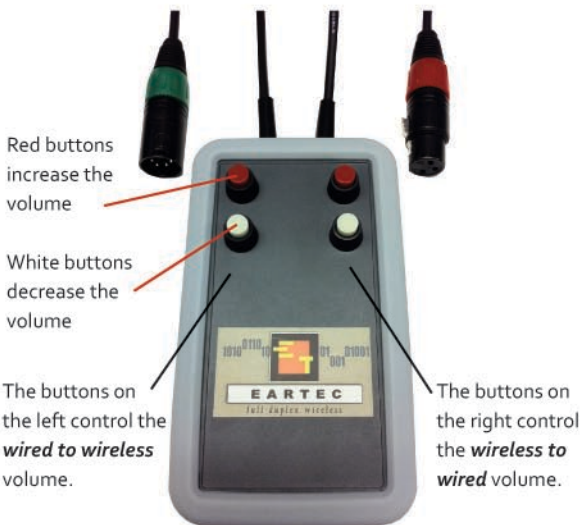

EARTEC[®]

145 Dean Knauss Drive
Narragansett, RI 02882
Tel: 1-800-399-5994
In RI: 401-782-4966
Fax: 401-789-7300
www.eartec.com